

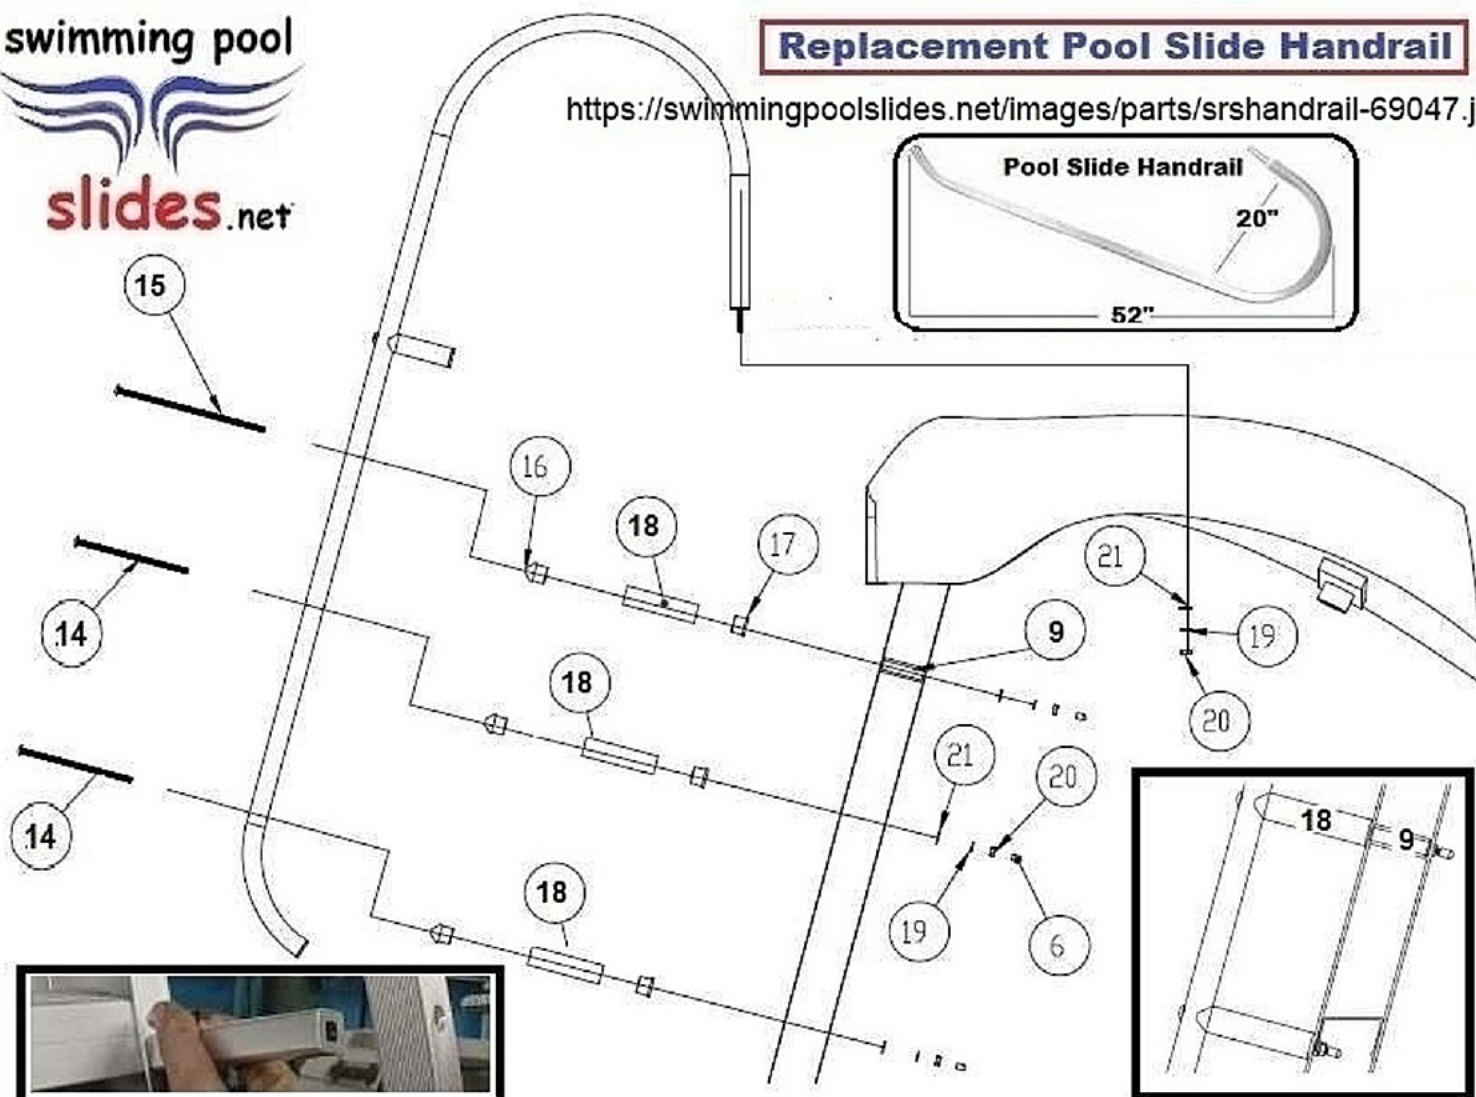


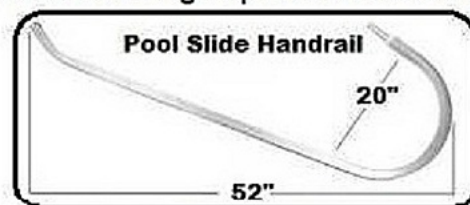

9	01-210	Aluminum Ladder Spacer	2 ea.
10	05-31-110S	5/16" x 1" Hex Washer Head Tek Screw S/S	4 ea.
11	05-14-101S	5/16" x 1" Lag Screw S/S	2 ea.
12	05-14-102	5/16" x 7/8" Flat Washer	2 ea.
13	05-622	5/16" x 3/4" Black Rubber Washer	2 ea.
14	05-31-151	1/4-20 x 6" Carriage Bolt S/S	4 ea.
15	05-31-149	1/4-20 x 8" Carriage Bolt S/S	2 ea.
16	6-121	Nylon Tube Connector	6 ea.
17	6-123	Nylon Handrail Connector	6 ea.
18	01-212	Aluminum Handrail Spacer	6 ea.
19	5-149	1/4" Lock Washer S/S	8 ea.
20	5-137	1/4-20 Hex Nut S/S	8 ea.
21	05-14-111	1/4 x 5/8 Flat Washer	8 ea.

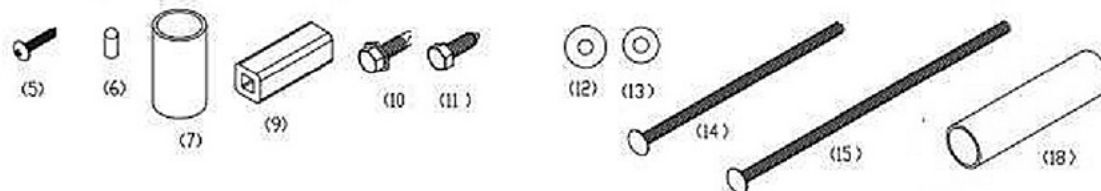

Depending on your slide model - You may have to drill new holes &/or adjust the length of the handrail with a hacksaw.

Required Length of #14 & #15 Carriage Bolts May Vary For your Installation.

We suggest use of 3/4" schedule 80 pvc pipe to replace the #9 & #18 Aluminum Handrail spacers. (Use a large flat washer at each end)