




DESIGNED
ENGINEERED
ASSEMBLED
IN THE **USA**

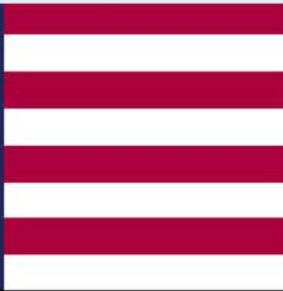

ASSEMBLED IN THE USA FROM GLOBALLY SOURCED MATERIAL

FIBROSLIDE

INSTALLATION AND USER MANUAL



FibroSlide Assembly Instructions:

- **BE SURE TO LAY A CLEAN BLANKET, BUBBLE WRAP OR CARDBOARD BENEATH THE FIBERGLASS COMPONENTS TO AVOID SCRATCHING.**
- **INVENTORY ALL PARTS, COMPONENTS, BOLTS, NUTS BEFORE ASSEMBLY.**
- **BE SURE THAT YOU HAVE ALL NECESSARY TOOLS ON HAND BEFORE ASSEMBLY**
- **ASSEMBLY IS A MINIMUM 2 PERSON JOB; ARRANGE AN ASSISTANT BEFORE HAND.**

1. Everyone who uses this slide must know, understand and follow these instructions
2. The ANSI/NSPI-4 2007 standard for above ground pools **prohibits** the use of slides or diving boards on above ground pools.
3. This Slide is designed for residential inground pool use **ONLY**. This slide may not be used on any **above ground pool**. Such use of this slide may result in serious injury or death.
4. This slide should never be installed on above ground pools, ponds, floating docks or platforms, boat docks or houseboats or any natural body of water.
5. This slide should never be installed on any commercial, public or semi-public pool.
6. Be Familiar with the shape and depth of the pool before you slide. This slide should only be used with the proper water safety envelope, as described in Diagrams and in accordance with the slide positioning instructions, as described in Diagrams.
7. Because the slide may only be used in water 4' deep or greater, all slide users must be able to swim in deep water.
8. Weight limit for this slide is 200 pounds, no slider weighing more than 200 pounds may use this slide.
9. The surface of the slide is very slippery when wet; **USE CAUTION** when entering the slide and when transitioning from standing to sitting.
10. Slide in a feet first sitting position **ONLY**.
11. **IMPORTANT:** sliding headfirst is prohibited: serious spinal injury resulting in paralysis or death can result.
12. Maintain adult supervision at all times.

13. Only one person at a time is allowed on the slide; this includes the ladder.
14. Be sure the water delivery system is on and lubricating the slide prior to use.
15. Collision with another swimmer or a diver can result in serious injury or death for one or both persons.
16. Before sliding, always make sure that the path in front of the slide is free from any (including submerged) obstructions including other people or objects in the pool such as rafts, inner tubes etc.
17. When a diving board is also present, make sure you do not use the slide while someone is on or using a diving board.
18. Take turns.
19. No roughhousing or horseplay should be allowed on the slide at any time.
20. Do not stand, jump or dive from any part of the slide.
21. Do not slide on objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
22. Do not slide through or at objects such as rafts or inner tubes, doing so greatly increases your risk of injury.
23. Do not use this slide if physically impaired or handicapped without your doctor's permission.
24. Do not use this slide with a history of heart conditions, seizures, back problems, fainting or fear of heights.
25. Do NOT use this slide if you are pregnant.
26. Do not drink alcohol and use this slide.
27. Don't take chances, inspect the slide at least once a year.
28. Do not use the slide if any part becomes loose, damaged, weakened or broken. If necessary, before using the slide again, have it inspected and repaired by a competent professional familiar with pool slides.
29. SLIDE IN A SITTING POSITION ONLY
30. Face forward on the slide, holding the legs and arms with the palms of your hands forward and tilted up.
31. WARNING: SERIOUS INJURY OR DEATH CAN RESULT FROM THE IMPROPER INSTALLATION OR USE OF THIS SLIDE.

WARNING: SERIOUS INJURY OR DEATH CAN RESULT FROM THE IMPROPER INSTALLATION OR USE OF THIS SLIDE



CONTENTS OF PACKAGE:

**Lower slide Section
(Lower Flume)**



**Upper Slide Section
(Upper Flume)**




Ladder pipes(2)



Ladder Rungs(6)



Handrail(2)

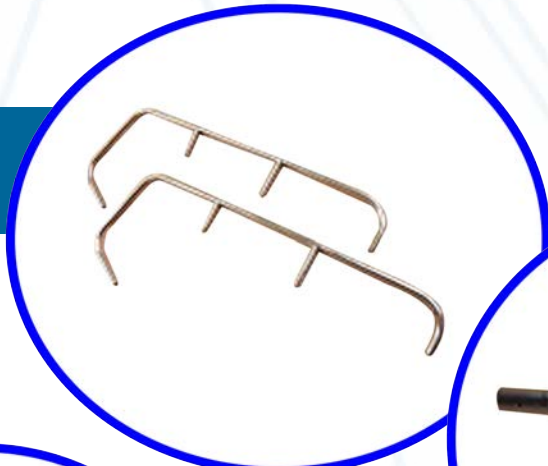

Legs(4)



**Handrail to Ladder
Bolts(4)**



**Handrail Top
Bolts (2)**



Handrail back Bolts (2)



Ladder Rung Bolts(12)



Leg Bolts, Top and Bottom(10)



Hex Key Wrench(1)



Tube, Valve, adapter, Nozzle, Clamp(2), Sealant



Leg Anchors(4), Ladder Anchors(2)



Flume Bolts for connecting 2 pieces of the slide flume



WARNING: SERIOUS INJURY OR DEATH CAN RESULT FROM THE IMPROPER INSTALLATION OR USE OF THIS SLIDE.



WEIGHT LIMIT 200 lbs

Safety Stickers and User Manual



Assembly Instructions:



Choose a clear area, lay out the cardboard box and the blankets as a work area.

Cut open the Bubble wrap from the flat ends of the 2 pieces of flume.



Lay 2 pieces of the flume upside down (slide part down against the blanket)



Apply a continuous bead of sealant to one side of the connecting faces.


- Align the holes, and insert bolts and hand tighten all of the nuts.



Once all bolts are in place, using a wrench, tighten up the bolts and nuts. Be careful not to over tighten and crack the fiberglass.



- **Insert slide legs(4) and Ladder Legs**

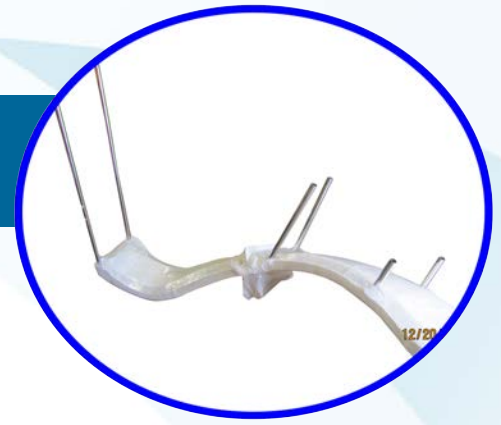

Turn the slide Correct side up


- **Line up the hand rail, then install the upper bolts (short). Hand tighten only.**



Install the back bolts through the slide body and ladder leg, into the handrail.



- **Install the remaining 4 bolts to connect the handrails to the legs.**

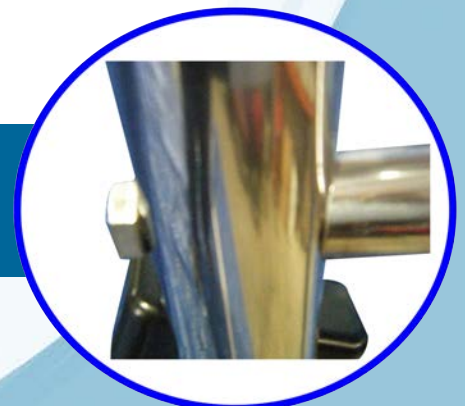

• **Install ladder rungs (treads) with washers under the nut. Hand tighten.**




• **Once all screws are in position and hand tight, go ahead and tighten them using a wrench.**

• **Insert upper leg bolts and tighten**



• **Insert Leg Anchors and tighten.**


2 Front and Left leg anchor (34)

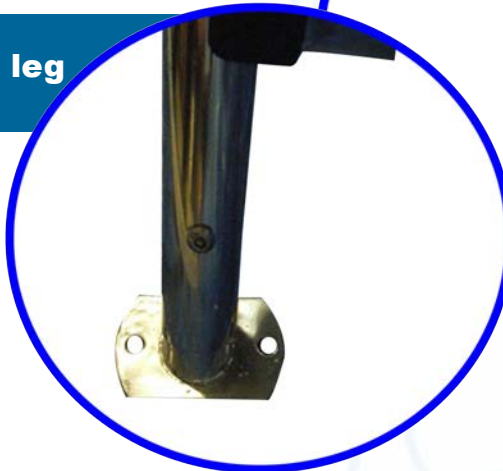

Ladder anchor(2)



Middle Right Anchor - (1)

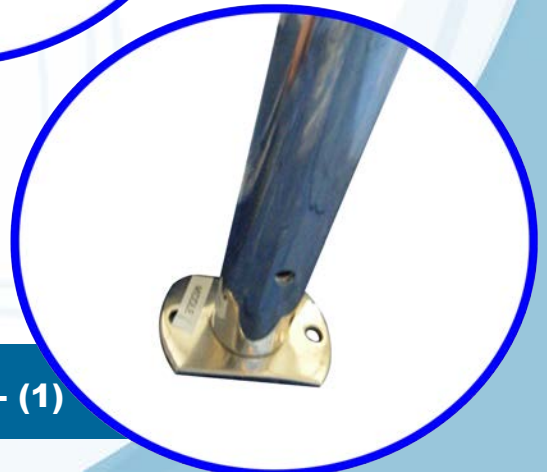

Note: 3 anchors are the same, 2 for the front, 1 for the left side of the slide. 2 angled anchors are for the ladder; 1 wavy anchor is for the right side of the slide(middle leg, right side, looking from the ladder to the tip of the slide).

If the deck is not level, slide the feet up and down and drill at the appropriate location



- **Insert water sprayer, rubber washer on top of slide and hand tighten**


- **Insert hose to sprayer and tighten the clamp.**



- **Glue the adapter into the valve.**



- **Attach the water hose to the adapter, feeding through the middle hole on the flume joint, and install the clamp.**

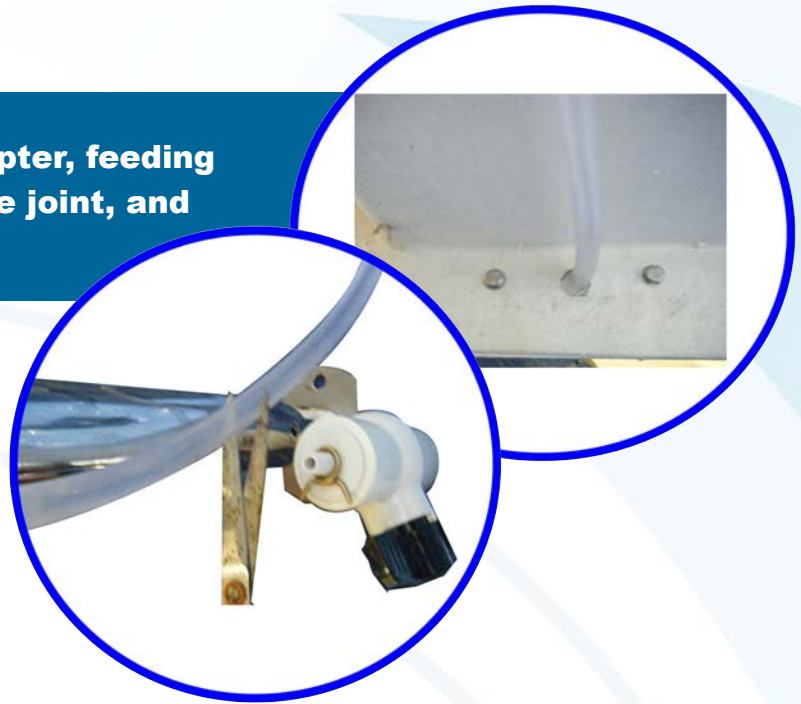

Install Safety Stickers




WEIGHT LIMIT 200 lbs




- **Position the slide, as per drawings.**
- **Drill and anchor down.**
- **Use appropriate methods for fastening to the specific surface your slide is installed on.**
- **Use high quality fasteners.**
- **Be sure to tighten all anchors well.**
- **Turn on the water supply and adjust the spray so pool does not lose much water.**
- **SUPERVISE AND ENJOY.**



DIAGRAM C
 (NOT TO SCALE)
 Minimum Water Safety Envelope

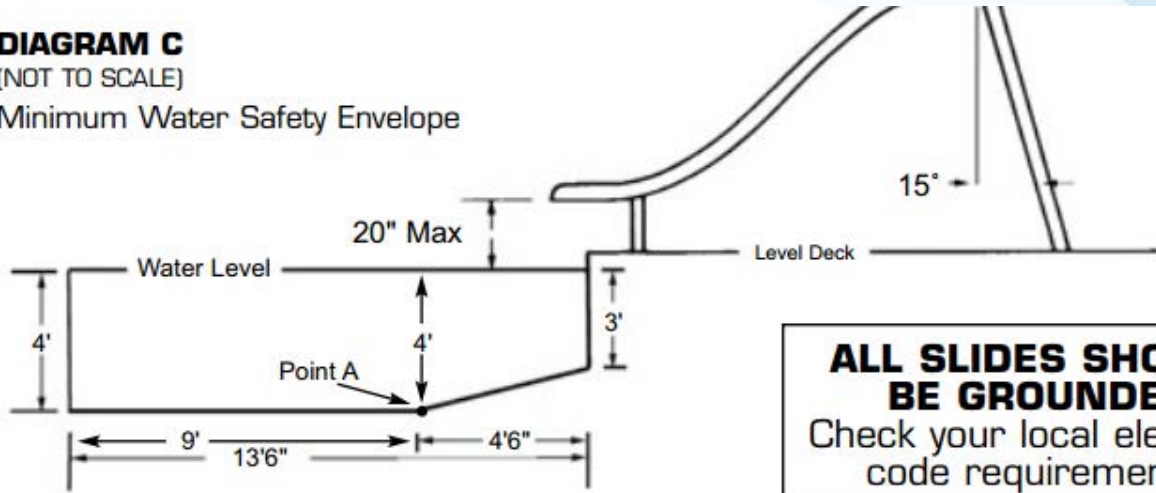

ALL SLIDES SHOULD BE GROUNDED
 Check your local electrical code requirements.

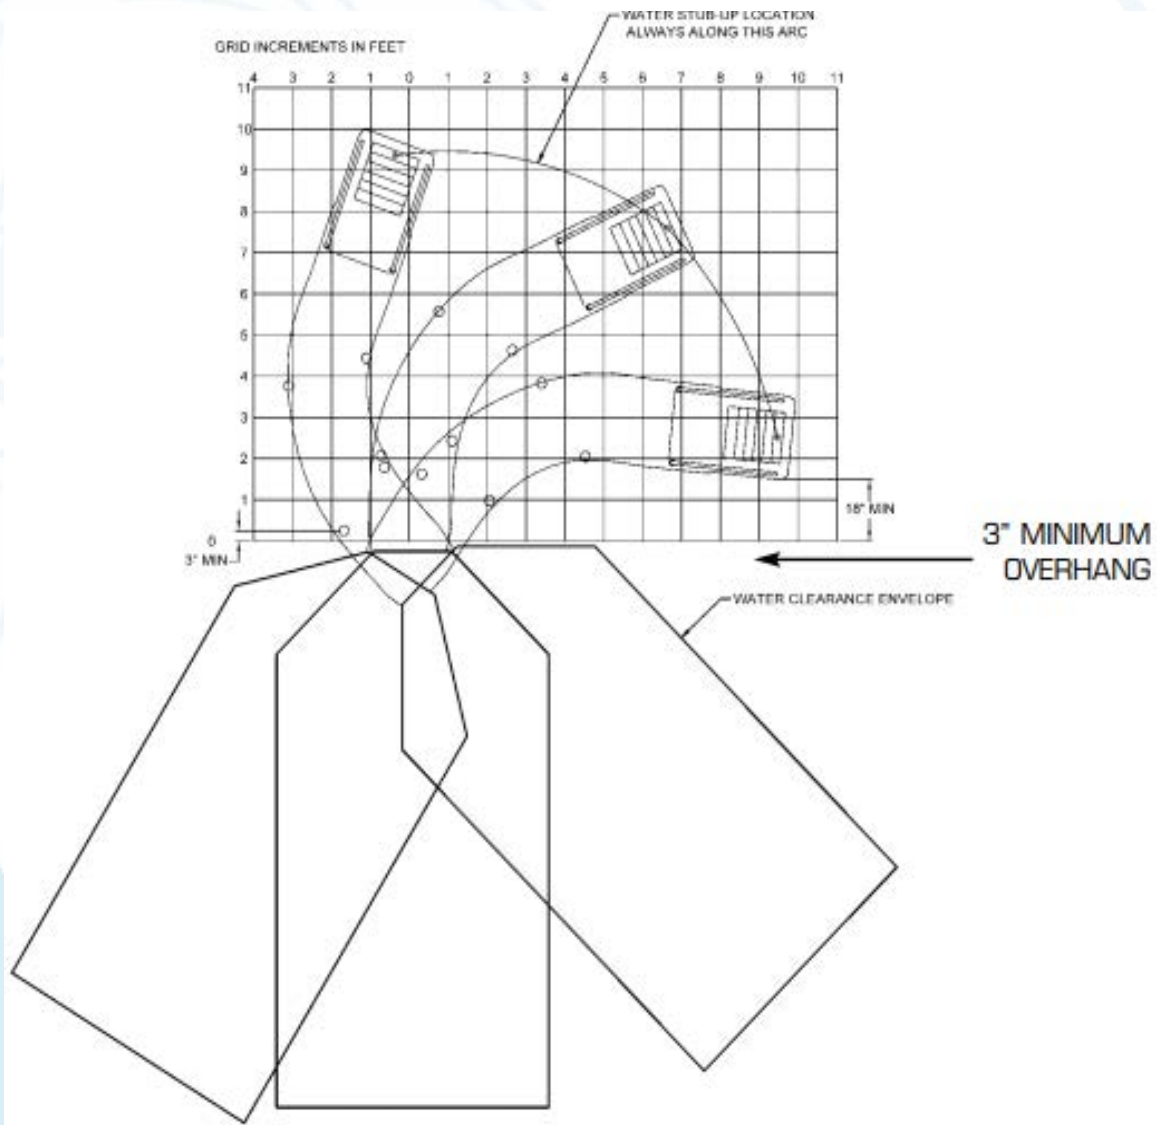

WATER SAFETY ENVELOPE:

A minimum water depth of three feet (3') under the exit of the slide which increases to a depth of four feet (4') at point A which is located four feet six inches (4'6") from the back wall of the pool. A minimum depth of four feet (4') must be maintained at a distance of nine feet (9') along the centerline of the slide from point A. The above described water depth profile shall extend a minimum of three feet three inches (3'3") on either side of the centerline of the slide.
 (See Diagrams A, B & C)

DIAGRAM A
(NOT TO SCALE)

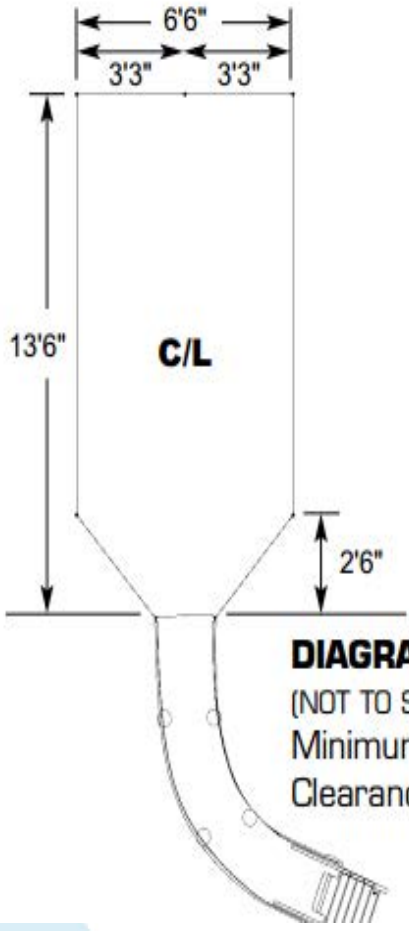
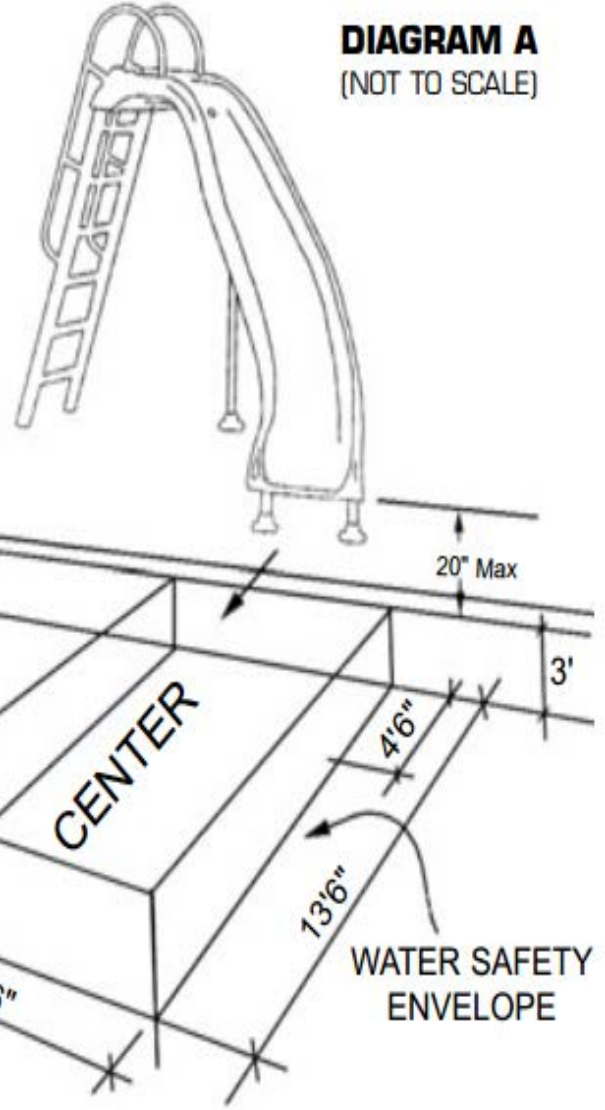


DIAGRAM B
(NOT TO SCALE)
Minimum Slide
Clearance Area

FIBROSLIDE LIMITED FACTORY WARRANTY

Fibropool Co. LLC warrants this Pool Slide, to the original owner, to be free of material and workmanship defects for a limited ONE (1) year term. Specific warranty terms are listed below. This warranty will begin on the day of the purchase, verified by the homeowner's proof of purchase documents.

The full warranty term includes parts only to repair or replace defective components or failure due to workmanship. CLAIMS FOR WARRANTY REIMBURSEMENT MUST HAVE PRIOR AUTHORIZATION BY FIBROPOOL. This warranty does not cover transportation charges for equipment or component parts to and from the factory.

This warranty is applicable only if the unit's installation and operation is expressly and completely followed in accordance with the purchased model's Owner/ Installation manual. These documents are furnished with each unit and are available by contacting the Fibropool Co. LLC. The liability of Fibropool Co. LLC shall not exceed the repair or the replacement of defective parts under the referenced year exclusion, ONE (1) year limited term and shall not include transportation to or from the Fibropool Service Center. Fibropool Co. LLC is not liable for any damages of any sort whatsoever, including incidental and consequential.

This warranty does not include damage to any internal piping or components due to freezing conditions, negligence and abuse, installations in corrosive environments or atmospheres nor acts of God. There are no implied warranties of merchantability of fitness for a particular purpose that apply to this product.

To obtain warranty authorization, please contact: Fibropool Co. LLC. , PO box 2425 Bay Saint Louis, Ms 39521 USA
www.fibropool.com Phone: +1 228 313 7874 (9-5 CST, M-F) Fax: +1-201 328 3300 e-mail: support@fibropool.com

WARRANTY SCHEDULE

- 1 Year parts only warranty on fiberglass section against breakage
 - 1 Year parts warranty on all stainless steel components.
 - 1 Year parts only warranty on water jets.
 - Surface shine/ finish gloss is not covered under warranty as the maintenance and weather conditions vary.
 - Plumbing lines should be drained in winter months to prevent freeze expansion damage.
 - Following installation and maintenance instructions will ensure a long life expectancy from your slide.
- Please retain this Warranty card for your records/ You do not need to send it in.

Customer Name

--	--

Address

--

City

State/Province

Zip/Postcode

Country

--	--	--	--

E mail address

Telephone #

--	--

Item purchased

Serial Number, if available

--	--

Date of Purchase

Dealer/ Retailer

--	--

Installer name and contact info, if other than dealer/ homeowner

--

v.202204